20" HIGH VELOCITY FLOOR FAN ASSEMBLY INSTRUCTIONS

MODEL: HVFF 20

Your MaxxAir™ fan requires minimal assembly. Only a Philips screwdriver is required to complete the assembly.

TUBE BASE ASSEMBLY INSTRUCTIONS

1. Remove two screws from V-shaped tube base. Retain screws for use in Step 4 below.
2. Slide one end of V-shaped tube base to the fan support tube with smaller end **(Fig 1 A in diagram).**
3. Slide the other end of the V-shaped tube base to the second other fan support tube with smaller end **(Fig 1 B in diagram).**
4. Align the holes in each side of the tube base with the holes in each side of the fan tube. **(Fig 1 C in diagram)**. Secure with screws removed in Step 1.

HOW TO ADJUST TILT

1. Use adjustment knobs on either side of fan to loosen tilt nut by turning counterclockwise.
2. Adjust fan head to desired tilt.
3. Tighten both knobs by turning clockwise.

SPEED CONTROL

1. Rotate switch to LOW (3), MEDIUM (2) or HIGH (1) speed for respective air velocity.

PLEASE NOTE:
It is ***normal*** for the fan motor to feel warm to the touch after continuous operation. This fan features a thermal cutoff that will automatically shut off the motor should it overheat for any reason. If this happens, unplug the fan from the outlet immediately.

FIGURE 1

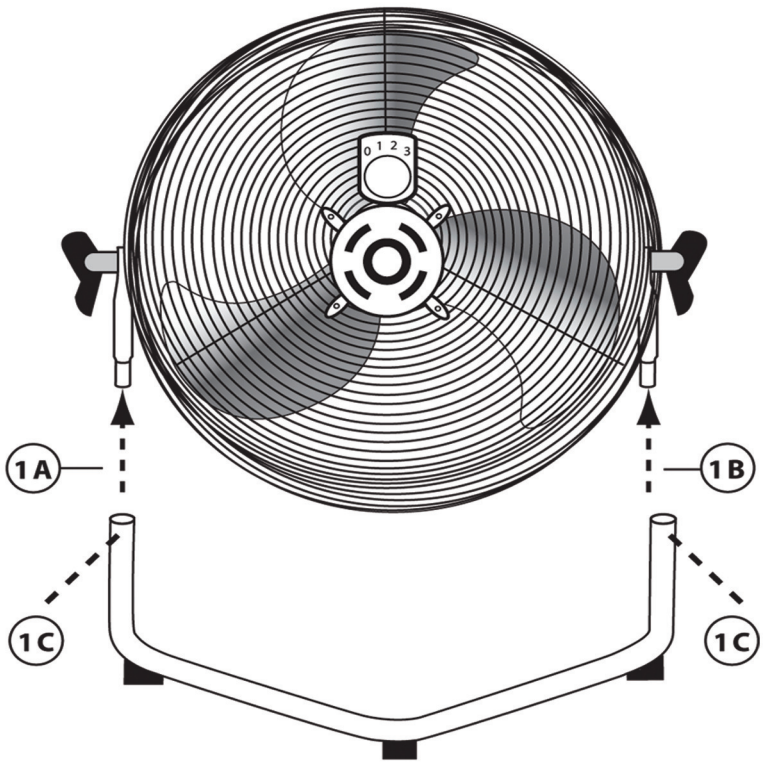

CLEANING

WARNING: Unplug the fan from electrical supply before cleaning.

- Use soft, damp cloth to clean fan. Remove any moisture with clean, dry cloth.
- Do not use any cleaning solution that is harmful to paint or plastic.
- Do not bend blades when cleaning fan.

PLEASE NOTE: The motor bearings in your MaxxAir™ fan are permanently sealed and DO NOT REQUIRE additional lubrication.

If you should have any questions about the operation of your MaxxAir™ High Velocity Floor Fan, please contact Ventamatic, Ltd. toll free at 1.800.433.1626

20" HIGH VELOCITY FLOOR FAN OPERATING INSTRUCTIONS

CONGRATULATIONS ON YOUR PURCHASE OF THE MaxxAir™ 20" HIGH VELOCITY FLOOR FAN.

With proper care and maintenance the fan will afford you many years of use. ***Please read the safety instructions below, and save for future reference.***

THIS FAN IS FOR RESIDENTIAL USE ONLY.

GENERAL SAFETY INFORMATION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the Fan.
2. Make certain that the power source conforms to the electrical requirements of the Fan.
3. Use the Fan only as described in these instructions. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
4. To reduce the risk of personal injury and electric shock, the Fan should not be played with or placed where small children can reach it.
5. Unplug power cord before installing, servicing or moving the Fan. **Warning: Do not depend upon the on-off switch as the sole means of disconnecting power when installing or servicing the fan. Always unplug the power cord.**
6. This Fan must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres.
7. DO NOT use Fan in or near a window. Rain may create an electrical hazard.
8. Completely assemble the Fan according to the assembly instructions on the reverse of this page before connecting to power supply. **Warning: this appliance has a polarized plug (wide blade of plug to wide slot, fully inserted). If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. Warning: this plug is a safety device. To reduce the risk of fire, shock, and personal injury, do not remove, replace, repair or tamper with the originally supplied plug. If the fan does not function properly, it may be due to the safety device incorporated in this plug. Call 800-433-1626, monday-friday, between 8:00 a.m. And 5:00 p.m. CST. If the plug warning label is missing or damaged, call the toll free number for a replacement label.**
9. Where possible, avoid the use of extension cords. If they must be used, minimize the risk of overheating by ensuring that they are UL listed. Never use a single extension cord to operate more than one Fan. Do not plug the Fan into any other cord-connected device such as a power strip, cord reel, surge protector, multiple outlet adapters or outlet-type air fresheners. The use of such devices may create a fire hazard.
10. Do not operate any Fan with a damaged cord or plug or after the Fan malfunctions, has been dropped or damaged in any manner.
11. Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening, as it may cause an electric shock, fire or damage the Fan. Do not block or tamper with the Fan in any manner while it is in operation.
12. Always place the Fan on a stable, flat, level surface when operating to avoid the chance of the Fan overturning. Locate the Power Cord so the Fan or other objects are not resting on it. Do not run Power Cord under carpeting. Do not cover Power Cord with throw rugs, runners, or the like. Arrange Power Cord away from room traffic and where it will not be tripped over.
13. This Fan is not intended for use in wet or damp locations. Never locate a Fan where it may fall into a bathtub or other water container.
14. Do not use Fan outdoors.
15. This Fan is not suitable for use in agricultural facilities including areas where livestock, poultry or other animals are confined. Please refer to National Electric Code (NEC) Article 547-7 (2008) or applicable state or local codes or standards relating to electrical requirements for Agricultural Buildings. THIS FAN DOES NOT MEET THE REQUIREMENTS OF NEC ARTICLE 547-7 (2008).
16. This Fan is not suitable for use in hazardous locations. Please refer to National Electric Code (NEC) Article 500 or applicable state or local codes or standards relating to electrical requirements for Hazardous locations. THIS FAN DOES NOT MEET THE REQUIREMENTS OF NEC ARTICLES 500 (2008).

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICES.

MODEL: HVFF 20

WARNING: DO NOT UNDER ANY CIRCUMSTANCES MOVE THE FAN WHILE IT IS IN OPERATION. ALWAYS UNPLUG THE FAN FROM THE POWER SOURCE BEFORE MOVING IT TO ANOTHER LOCATION.

SAVE THESE INSTRUCTIONS

VENTAMATIC, LTD. P.O. BOX 728, MINERAL WELLS, TX 76068-0728 • PHONE 800-433-1626 FAX 940-325-9311 • WWW.BVC.COM • E-MAIL: BVC@BVC.COM

A leader in the ventilation industry for over 60 years, Ventamatic, Ltd. offers a complete line of air movement products for commercial, industrial, agricultural, and residential use sold under these fine names:

Ventamatic Cool Attic MaxxAir nuVent

VENTILADOR DE PISO DE ALTA VELOCIDAD DE 51 CM
INSTRUCCIONES DE ENSAMBLE

MODELO: HVFF 20

Su ventilador MaxxAir™ requiere minimo ensamble, solo necesita un desarmador para completar el ensamble..

Instrucciones de ensamble de la base de tubo

1. Remueva los dos tornillos de la base en foma 'V' de tubo y guardelos para el proceso 4 abajo
2. Resbale la punta de la base en forma 'V' dentro del tubo de soporte del ventilador que tiene la punta mas chica (figura la en el diagrama)
3. Resbale la punta del tubo en forma 'V' de la base dentro del Segundo soporte del tubo del ventilador con la punta mas chica
4. Alinear los hoyos en cada lado del tubo de la base, con los hoyos en cada lado del tubo del abanico (Fig. 1C diagrama)

COMO AJUSTAR EL RECLINAJE

1. Utilice las perillas de ajuste de cualquier lado del ventilador, para aflojar la tuerca de maneo dandole vuelta al sentido opuesto del reloj
2. Ajuste el abanico a la inclinación deseada
3. Aprete las dos perillas dandole vuelta a la dirección de las manecillas del reloj.

CONTROL DE VELOCIDAD

1. Gire el control de velocidad a BAJA (3), a MEDIA (2) o ALTA (1) Velocidad

NOTE POR FAVOR:
Es normal que el motor del ventilador se sienta tibio al tocarlo despues de uso continuo. Este abanico ofrece una protección termal que automaticamente apagaria el motor si éste llega a calentarse por alguna razón, si esto pasa desconecte el ventilador inmediatamente.

FIGURE 1

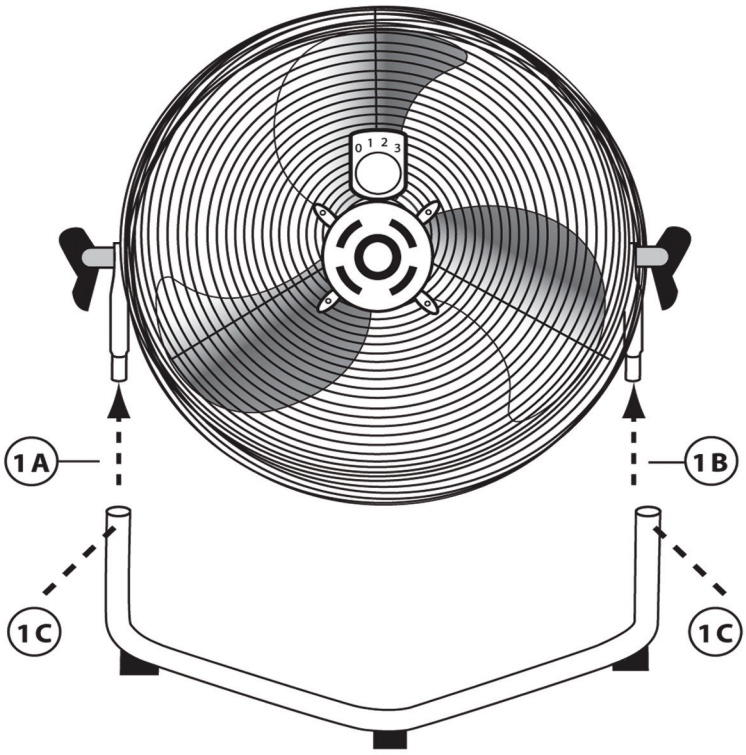

LIMPIEZA

CUIDADO: Desconecte el ventilador de la electricidad antes de limpiarlo.

- Utilice un trapo suave y humedo para limpiar el ventilador. Quite cualquier residuo de humedad con un trapo seco.
- No utilice alguna solución quimica que es dañina para la pintura o plastico.
- No doble las aspas cúando las limpie.
- Si el cordón de alimentación es dañado, éste debe sustituirse por el fabricante, por su agente de servicio autorizado o por personal calificado con el fin de evitar un peligro.

NOTE POR FAVOR: Los cojinetes del motor en su MaxxAir™ ventilador son de sellado permanente y no requieren lubricación adicional.

Si usted tiene alguna pregunta con respecto a la operación de su ventilador MaxxAir™ de piso de alta velocidad, comuniquese con Ventamatic, Ltd. Linea gratis 1.800.433.1626

VENTILADOR DE ALTA VELOCIDAD DE PISO DE 51 CM
INSTRUCCIONES DE OPERACIÓN

MODELO: HVFF 20

FELICIDADES EN SU COMPRA DEL VENTILADOR BIG AIR DE ALTA VELOCIDAD DE PISO DE 51 CM. Con el cuidado y mantenimiento apropiado su abanico le dara muchos años de uso. POR FAVOR LEA LAS INSTRUCCIONES DE SEGURIDAD SIGUIENTES Y GUARDELAS PARA UNA REFERENCIA FUTURA.

ESTE ABANICO ES SOLO PARA USO RESIDENCIAL.

INFORMACIÓN GENERAL PARA SEGURIDAD.

Cuando se usen los electrodomésticos precauciones basicas siempre deven de ser seguidas para reducir el riesgo de fuego descargas electricas y daño personal, incluyendo lo siguiente:

1. Lea las instrucciones antes de usar el ventilador.
2. Asegurese que la electricidad esta en conformidad con los requisitos del ventilador.
3. Utilice el abanico solo como se describe en estas instrucciones. Cualquier otro uso no recomendado por el fabricante puede causar fuego, descargas electricas o daños personales.
4. Para reducir el riesgo de daños personales y descargas electricas no se debe jugar con el ventilador o ponerse donde los niños puedan alcanzarlo.
5. Desconectese antes de instalarlo, moverlo o darle servicio. **Advertencia: no dependa en el apagador como unico medio de bloqueo de electricidad, siempre desconecte el cable electrico si se le va a instalar o dar servicio.**
6. Este ventilador no se deve de usar en lugares con potencial de peligro tal como flammables, explosivos, ambientes mojados o peligos quimicos.
7. No se use el ventilador cerca de una ventana, la lluvia puede crear un peligo electrico.
8. Ensamble el ventilador completamente de acuerdo con las instrucciones al reverso de esta pagina, antes de conectarse a la corriente. **Precaucion: este electrodoméstico tiene un enchufe polarizado (la clavija ancha del enchufe a la entrada ancha, completamente insertado) si el enchufe del cable no cabe completamente dentro del enchufe de la pared dele vuelta, y si todavia no cabe comuniquese con un electricista calificado. No trate de vencer esta medida de seguridad. AVISO: este enchufe es una medida de seguridad para reducir el riesgo de fuego, electrocución y daños personales. No se remueva, remplace, repare o ultraje el enchufe proveido originalmente. Si el ventilador no funciona apropiadamente, puede que sea el mecanismo de seguridad incorporado en éste enchufe, llame a 800-433-1626 lunes a viernes entre 8:00 a.M. A 5:00 p.M. Ct, si la etiqueta de aviso a sido dañada o perdida, llame al telefono gratuito para remplazar la etiqueta.**
9. Si es posible evite el uso de extensión electrica, si tiene que usarlas minimice el riesgo de sobrecalentamiento asegurandose que son aceptadas por UL. Nunca utilice una sola extención electrica para prender mas de un ventilador ; no enchufe el ventilador dentro de una tira electrica multiple, enrollador de cable, protector de alti-bajas electricas, adaptador con multiples enchufes o enchufe de aire refrescante. El uso de tales aparatos puede crear peligro de fuego.
10. No se use el ventilador con extensión o enchufe dañado o despues que el ventilador mal funciono se cayo o se daño en cualquier forma.
11. No inserte o permita que sus dedos u otros objetos foraneos entren al ventilador o abertura de evacuación, porque hay la posibilidad de ocacionar corto electrico, fuego o daño al abanico. No obstruya o ultraje el ventilador de ninguna manera mientras este prendido
12. Siempre ponga el ventilador en una superficie plana y estable cuando este prendido, para prevenir la posibilidad de que el ventilador se caiga, localice el cable electrico para que el ventilador u otros objetos no esten sentados en el. No corra el cable electrico bajo la alfombra, no cubra el cable electrico con tapetes o cosas similares, arregle el cable electrico lejos del trafico del cuarto para evitar tropiesos.
13. Este abanico no fue hecho con el proposito de usarse en climas humedos o mojados, nunca utilice el ventilador donde se pueda caer en un recipiente con agua o en la tina del baño.
14. No se use a la intemperie.
15. Este ventilador no es apropiado para utilizarse en facilidades agriculturales, incluyendo areas done el Ganado vacuno, Ganado ovipero u otros animals, esten confinados. Por favor refierace al Codigo Electrico Nacional (NEC) Articulo 547-7 (2008) o codigos del estado o locales o normas que se relacionen a los requerimientos electricos para edificios de agricultura. **Este ventilador no da los requerimientos de nec articulo 547-7 (2008)**
16. Este ventilador no es apropiado para usarse en lugares peligrosos. Por favor refierace al Codigo Electrico Nacional (NEC) Articulo 500 o codigos aplicables locales o del estado o procedimientos con relacion a los requerimientos electricos de lugares peligrosos. **Este ventilador no da los requerimientos de nec articulo 500 (2008)**

Advertencia: para reducir el riesgo de fuego o descargas electricas, no use este abanico con ningun control de velocida de estado solido.

ADVERTENCIA: DESCONECTESE ANTES DE INSTALARLO, MOVERLO O DARLE SERVICIO.

GUARDE ESTAS INSTRUCCIONES

VENTAMATIC, LTD. P.O. BOX 728, MINERAL WELLS, TX 76068-0728 • PHONE 800-433-1626 FAX 940-325-9311 • WWW.BVC.COM • E-MAIL: BVC@BVC.COM

A leader in the ventilation industry for over 60 years, Ventamatic, Ltd. offers a complete line of air movement products for commercial, industrial, agricultural, and residential use sold under these fine names:

Ventamatic Cool Attic MAXX AIR nuVent